



How to Set up the One-Key Disarming Function on a Uniview NVR?

Title	How to Set up the One-Key Disarming Function on a Uniview NVR?	Version:	V1.0
Product	NVR	Date	11/21/2023

How to Set up the One-Key Disarming Function on a Uniview NVR?

Description

The one-key disarming function can help you cancel alarm-triggered actions of NVRs or IPCs with one click on your EZView app.

Note: This method is applicable to most of the scenarios, if the method still cannot solve your problem, it is recommended to consult our Tech Support Team.

https://global.uniview.com/Support/Service_Hotline/

Preparation


Ensure that you've configured all settings about One-Key Disarming on your Uniview NVR before proceeding further.

Operating Steps

Set up from the NVR's monitor

Step 1 Log in your admin account from your Uniview NVR's monitor.

Step 2 Set up the One-Key Disarming function under **Menu>Alarm>One-Key Disarming>IPC Disarming**.

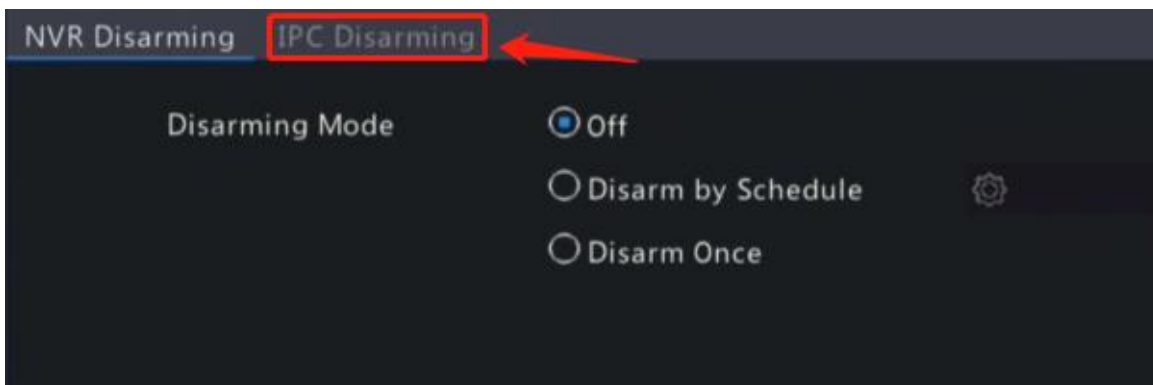

Step 2.1 Choose **Disarm Once** for **Disarming Mode** and set up the Disarming Time.

Note: **Disarm Once** means that the NVR is disarmed during a specified time period. Select **Disarm Once**, and set the disarming start time and end time.

Step 2.2 Choose the type(s) that you want to disarm such as alarm sound and alarm light (the default is all actions).

Step 2.3 Select the channel you want to disarm and then click **Apply** to complete the configurations on the monitor.


Title	How to Set up the One-Key Disarming Function on a Uniview NVR?	Version:	V1.0
Product	NVR	Date	11/21/2023

Note: You can click Copy on the bottom of the monitor to copy the same settings to the other channels as well.

Set up from the NVR's web interface

Step 1 Log into the Uniview NVR's web interface.

Step 2 Set up the One-Key Disarming function under **Setup>Alarm>One-Key Disarming**.

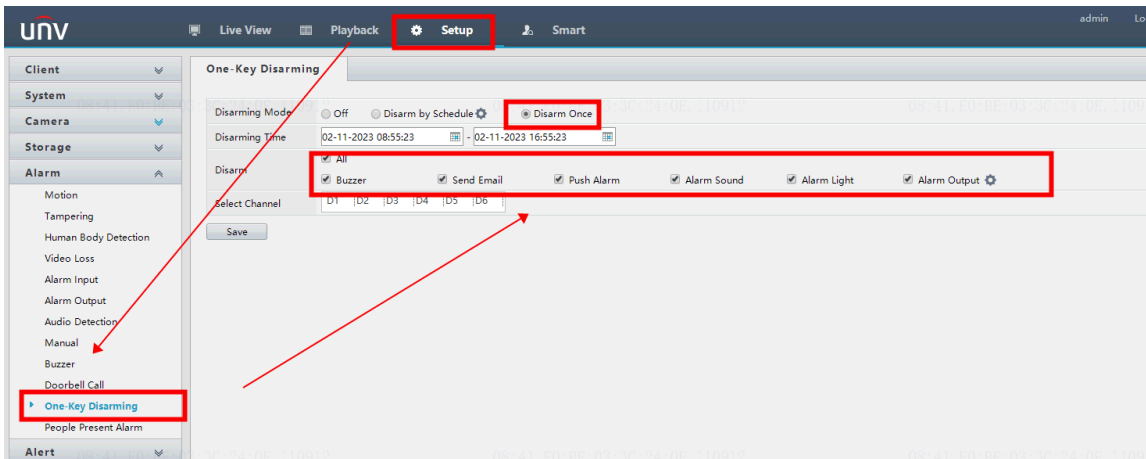

Step 2.1 Choose **Disarm Once** for **Disarming Mode** and set up the Disarming Time.


Step 2.2 Choose the type(s) that you want to disarm such as alarm sound and alarm light.

Step 2.3 Select the channel you want to disarm and then click **Save** to complete the configurations on the monitor.

Set up from EZView


Step 1 Log into your EZView app and go to **Device Config**. Find the NVR under **Device Config** and click the > icon beside the name of your NVR. And then you can see all the cameras on this NVR.

Title	How to Set up the One-Key Disarming Function on a Uniview NVR?	Version:	V1.0
Product	NVR	Date	11/21/2023

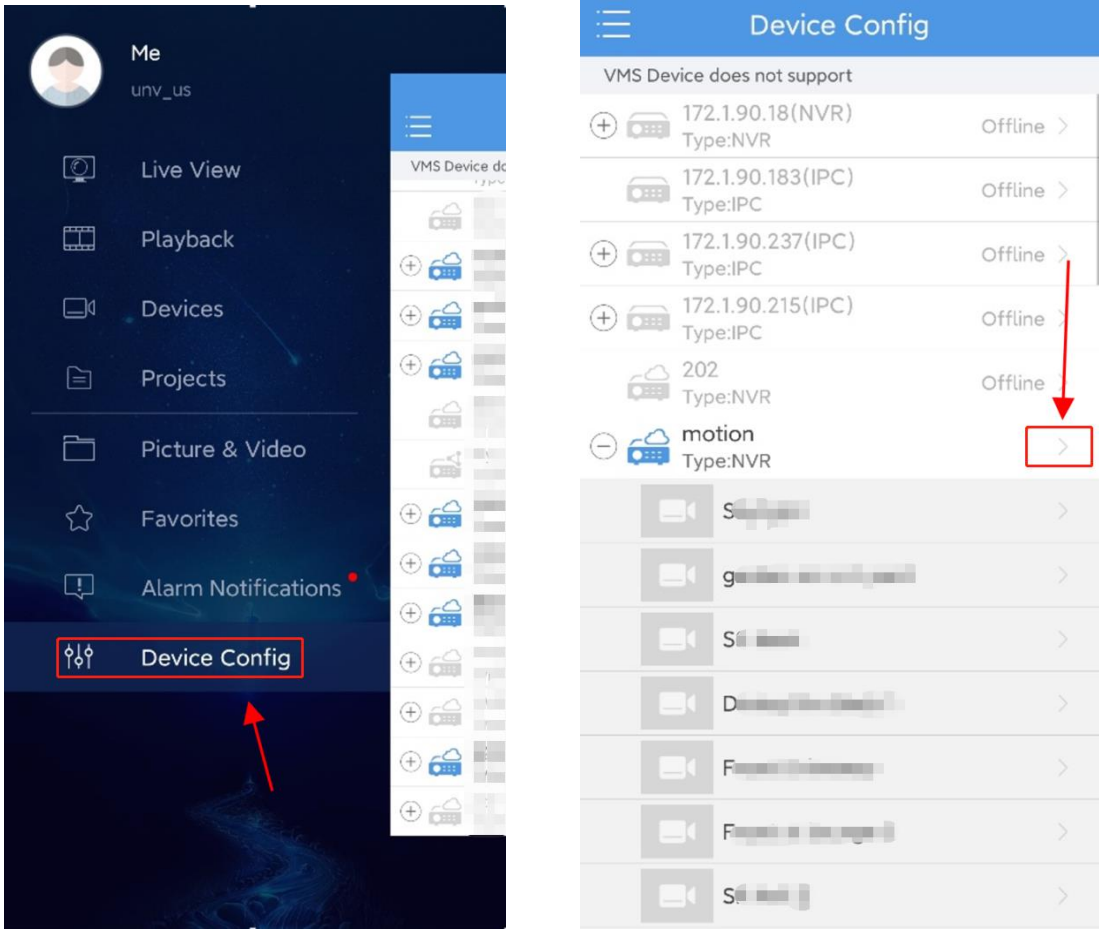


Step 2 Tap the camera you want to set up the disarming function for and then go to **Disarm Alarm Linkage** under **Settings>Alarm**.


Step 2.1 Tap **Disarm Alarm Linkage** and select the device you want to set up. Tap **Disarm Once** and then set up the disarm time (start and end time).

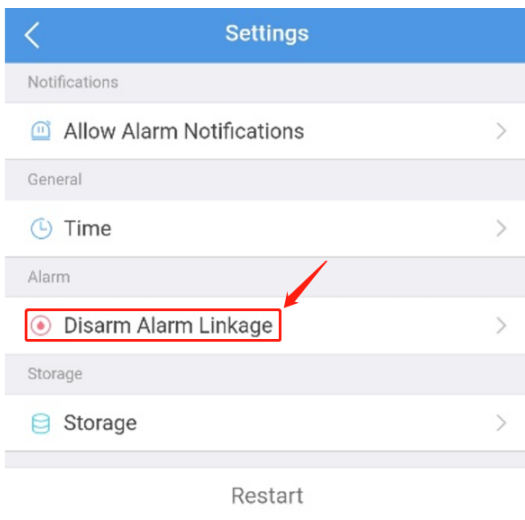

Title	How to Set up the One-Key Disarming Function on a Uniview NVR?	Version:	V1.0
Product	NVR	Date	11/21/2023

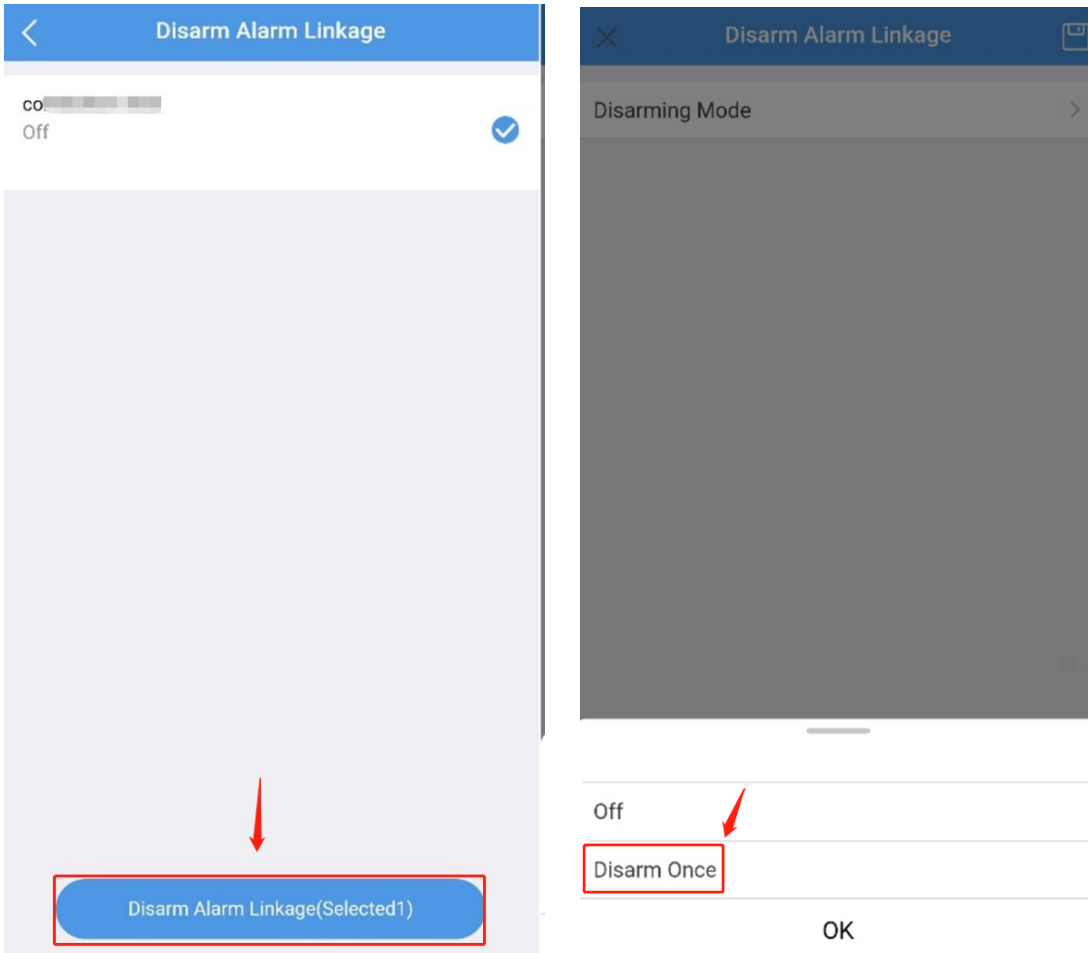

Step 2.2 Click **OK** to save the configurations.

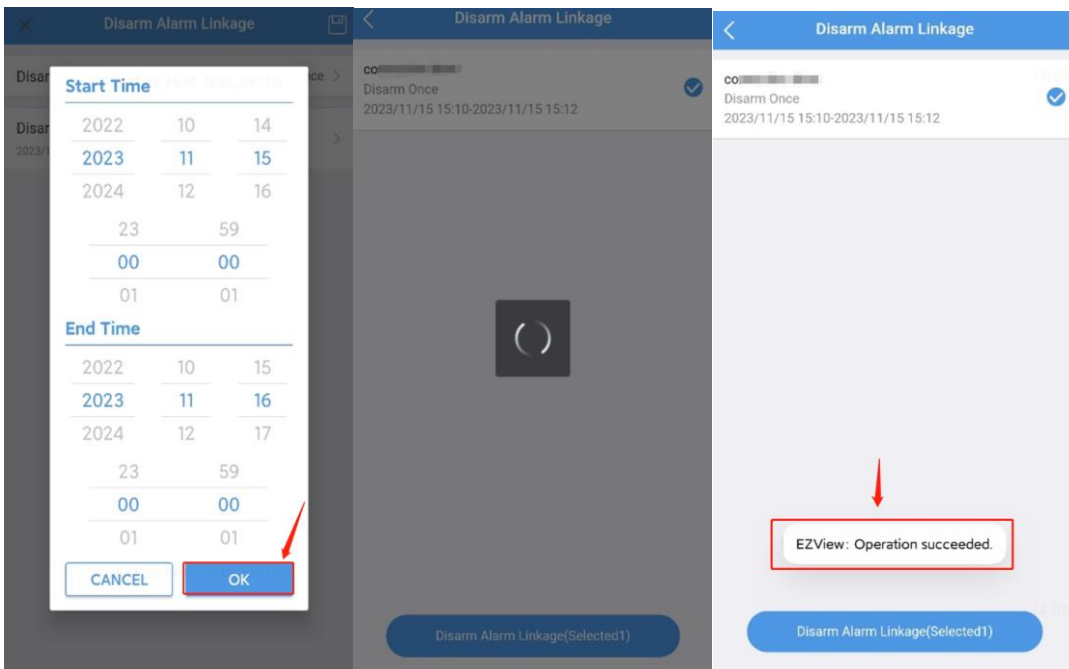

Note: If the one-key disarming function is not working on your EZView app, please try to upgrade your Uniview NVR and camera to the latest version and then set up this function from the NVR itself again to solve this problem.